

Earth Anchor Cable Installation Instructions

Items: 3A-EC400, 3A-EC680, 3A-EC880

Tools required:

Better Bilt Drive Rod in corresponding size (sold separately)


Heavy hammer and adjustable wrench (or equivalent)

Installation Note:


A pre-drilled 2" pilot hole is highly recommended prior to installing the 680 and 880 model anchors



CONFIRM LOCATION OF ALL UNDERGROUND UTILITIES BEFORE INSTALLATION

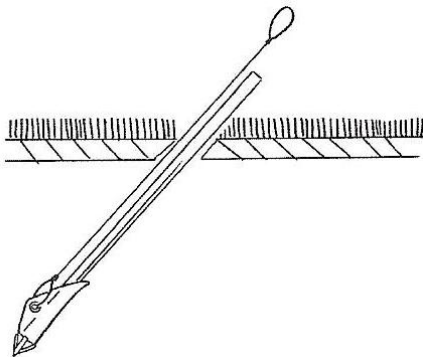


- 1.) Insert Drive Tool onto the Earth Anchor. Using a heavy hammer, drive anchor into the ground until only the cable loop is showing above ground level. Remove Drive Tool.

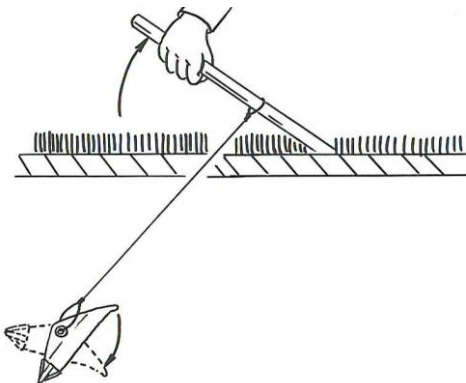


- 2.) Insert Drive Tool through exposed cable loop (3A-EC400 requires winding the exposed cable around Drive Tool). Place Drive Tool end against firm soil for leverage. Pry up on Drive Tool to "set" the anchor. Pull up until no additional movement is noticed. Anchor is "set" for maximum holding capacity when it is perpendicular to the securing cable.

Verify your requirements prior to driving the anchor into the ground. Each anchor application may differ due soil type, tree size and species, and location. Anchor holding capacity is dependent on soil type and density.

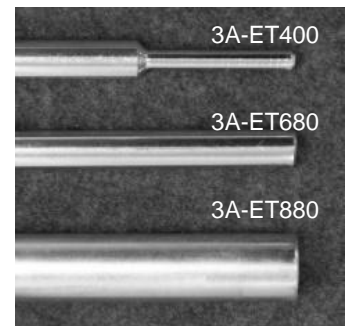

Better Bilt "Drive Rods" sold separately

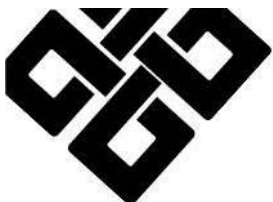

Better Bilt Products, Inc.

For more information contact: Sales / Better Bilt Products
800.544.4550 / 630.543.6767

Fax: 630.543.0524

bbponline.com

Purchase our products online at: cartsnanchors.com